

Alarm.com SVR

Need help? Give us a call.
1-877-826-5443

Install

STEP 1

Use a standard Ethernet cable to connect the SVR to the router. The SVR must be connected to the same router as the cameras you will record.

STEP 2

Connect the SVR AC adapter to the SVR and plug it into an electrical outlet.

STEP 3

From a computer on the same network as the SVR log into your Alarm.com account.

STEP 4

From your Alarm.com account go to the video tab on the left. From here select SVR Timeline. Select the option to “click here to add an SVR to this account.”

STEP 5

Follow the onscreen instructions to connect the SVR.