


For 2GIG Panel Plunger Door Sensor

Need help? Give us a call.
1-877-826-5443

Enroll

- a. **Select**  on the bottom right hand corner of the home screen.
- b. **Enter** the installer code.
- c. **Select** **SYSTEM CONFIGURATION**.
- d. **Press** **▶** until you come to a free sensor space.
- e. **Press** **▼**.
- f. **Press** **▶** to select Exit/Entry 1 for an entry door **or** continue **pressing** the **▶** to select Perimeter for a window or non-entry door.
- g. **Press** **▼** and leave the selection at 0000-other. **Press** **▼**.
- h. **Press** **SHIFT** then **LEARN**. Trigger the sensor by **pressing in** and **releasing** the plunger.
- i. **Press** **OK** then **press** **▼**.
- j. **Set** the equipment age to "new." **Press** **▼**.
- k. **Set** the loop number to 2 by pressing the **▶**. **Press** **▼**.
- l. **Set** the dialer delay to **ENABLED**. **Press**.
- m. Choose the **VOICE DESCRIPTOR** by **pressing** **INSERT** and **entering** the corresponding code for each name. **Press** **▼**.
- n. **Set** the reports to **ENABLED**. **Press** **▼**.
- o. **Set** supervised to **ENABLED**. **Press** **▼**.
- p. **Press** **▶** to change the chime to **VOICE ONLY**. **Press** **▼**.
- q. **Press** **SKIP**. **Press** **END**. Make sure the "save changes" box is checked and **press** **EXIT**.

Install

STEP 1

Use a 3/4" drill bit to drill into the door jamb to 1 1/4" depth.

STEP 2

Drill a 1/4" hole in the center of the cavity through the door jamb to make an area for the antenna to be inserted.

STEP 3

Insert the plunger and antenna into the door jamb. Secure the plunger with the provided screws.