


LiftMaster 828LM Internet Gateway

Need help? Give us a call.
1-877-826-5443

Setup

STEP 1

Connect ethernet cable to router and internet gateway. Connect power to the internet gateway. When the internet gateway connects to the internet, the green light will stop blinking and will light solid, if the green light does not light solid, check the power, router, and internet connections to the internet gateway (see figure below.)

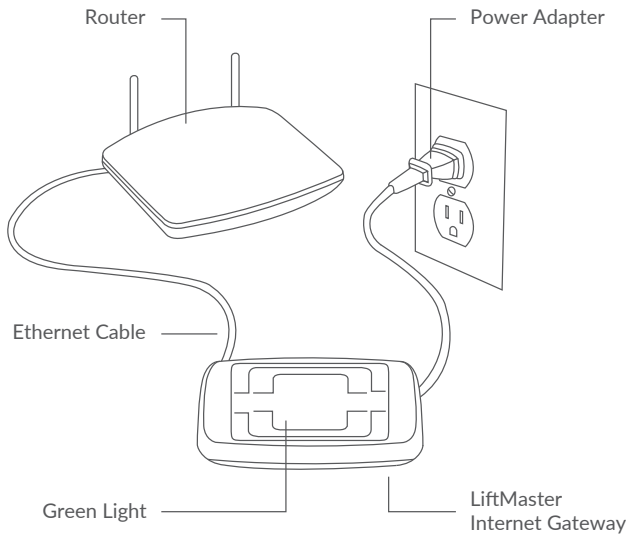


Enroll

STEP 1

Visit alarm.com to create an account. If you already have an account, log in using your account email address and password.


STEP 2

From your Alarm.com account, click on the emPower tab.

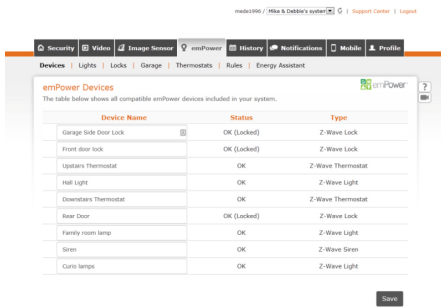


STEP 3

Click on Garage.

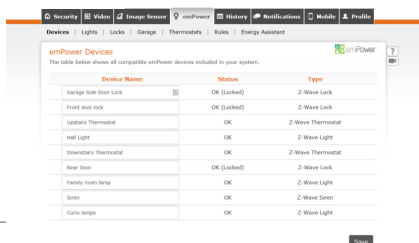


STEP 4

Click on Add Gateway.

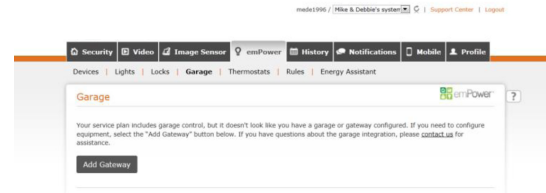


STEP 5

Making sure the green light is solid, enter your serial number (no spaces) as directed and click Continue. This step can take up to 30 seconds.

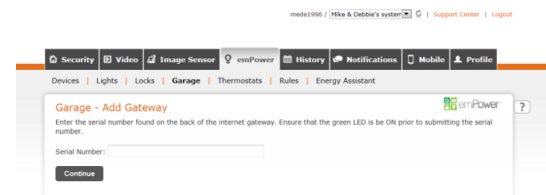


STEP 6

Continue to follow directions as prompted.

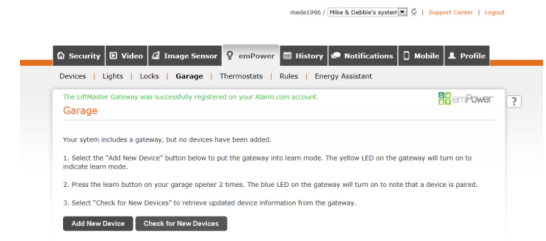

STEP 7

Your garage door status will refresh and you can now begin using your Alarm.com account to remotely operate your garage door.

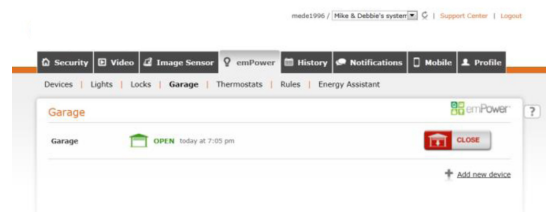

Test

STEP 1

Try viewing and controlling your newly added device from an internet-enabled computer or smartphone.