

The Flood Sensor detects the presence of water. This device always monitored to alert you of these conditions even when the system is disarmed.

PLACE: Place the Flood Sensor in a flood-prone area such as a basement or near appliances such as a washing machine, water heater, furnace or sump pump.

Step 1

Remove the adhesive from the back of the sensor. Mount the transmitter on a vertical surface at least 4" from the floor and set the sensor on the floor with the silver probes down.

